



INSTRUCTION FOR WALL-FIXING OF VANITY UNIT "GAYA"

Vanity unit Gaya with 2 drawers L.(cm. 60-23 $\frac{5}{8}$) (cm.70- 27 $\frac{9}{16}$) (cm.90-35 $\frac{7}{16}$)

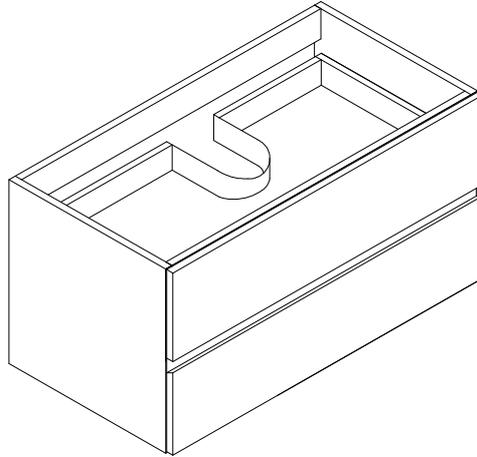

Suggested dimensions for wall-fixing of Gaya Vanity units

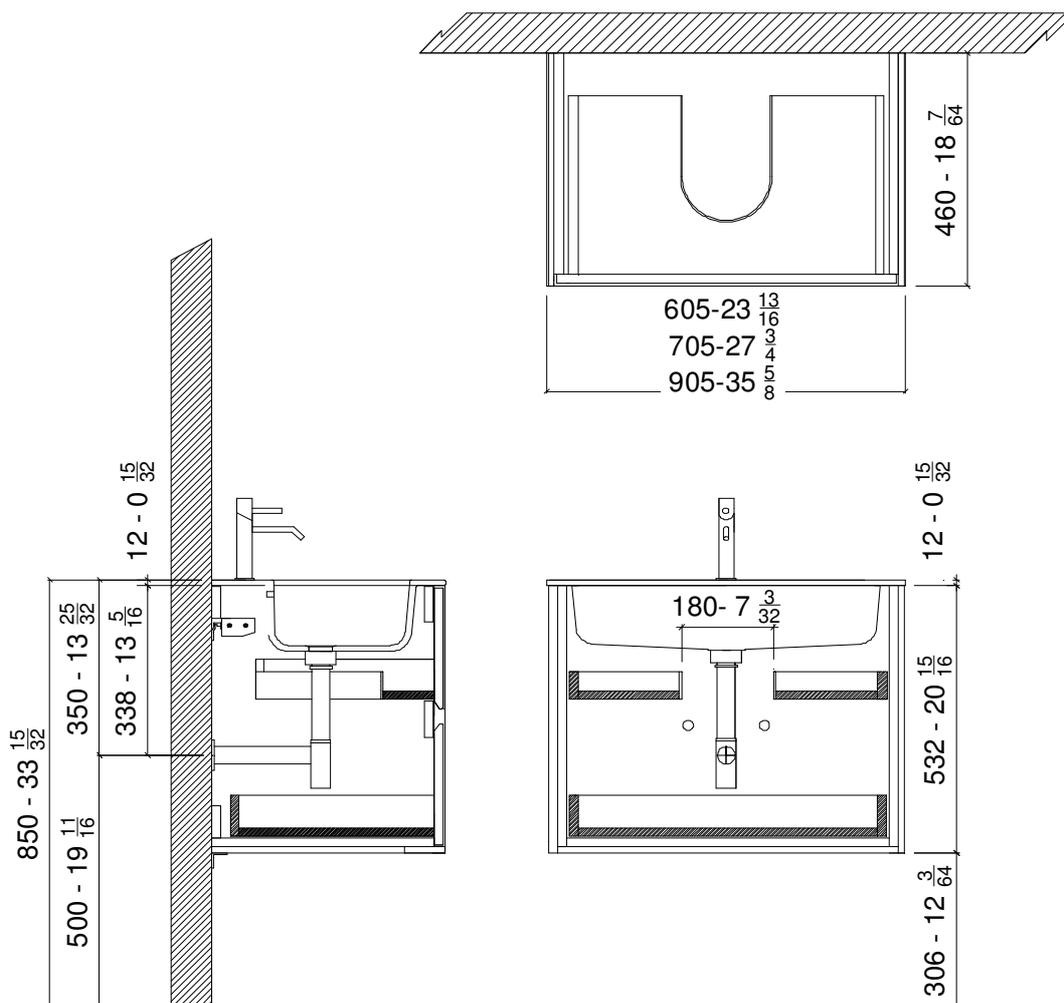

Before You start:

- During unpacking, please check-up the product, if it is complete and not being damaged.
- Supplied supporting brackets/fixings system and screws are only for solid, full wall. Take care, by yourself, that you are using the right screws for wall type – in case of doubts, please consult professional staff.
- Clean the room and the surface, the area must be dry and without dust or powder.
- Please read completely these instructions.
- Take care that you have got all necessary and correct work tools, please see the following list of “necessary tools”.








Safety:

- Handle with care the cardboard boxes and packaging, avoiding risks to damage furniture.
- Bathroom furniture is heavy and needs 2 people to support/transport and install it.
- During wall drilling, first check-up that there are no hidden pipes or cables inside the wall.
- Use safety-glasses during drilling arrangements.
- Before electrical connection, disconnect the main Voltage power supply.


Disclaimer/ Exclusion of liability

- Please notify Your Dealer immediately, if there are any damage or defects. The Manufacturer cannot be held responsible for any installation costs, which can result from damaged or defective product during installation.
- Always dispose the packaging materials respecting the environment.

Necessary tools (not supplied)

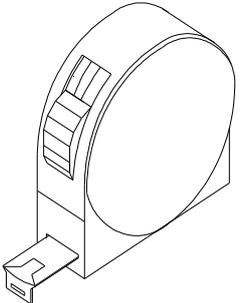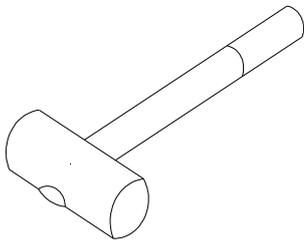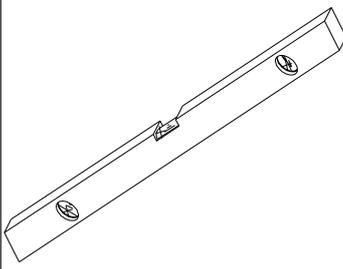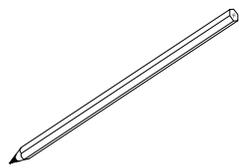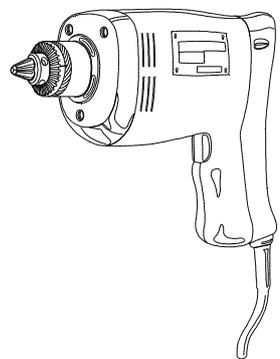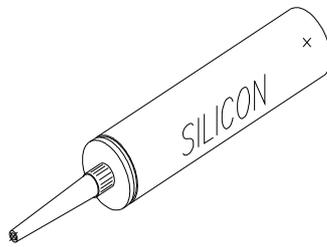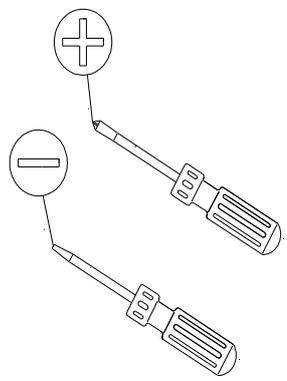RULE	RUBBER HAMMER	SPIRIT LEVEL	PENCIL
			
TWIST DRILL	ELECTRIC HAND-DRILL	SILICONE	SCREWDRIVER
 <p> $\phi 5 - \phi 8 - \phi 10$ $0 \frac{13}{64} - 0 \frac{5}{16} - 0 \frac{25}{64}$ </p>			


Before installation of Vanity unit, you must remove and pull out the drawers.

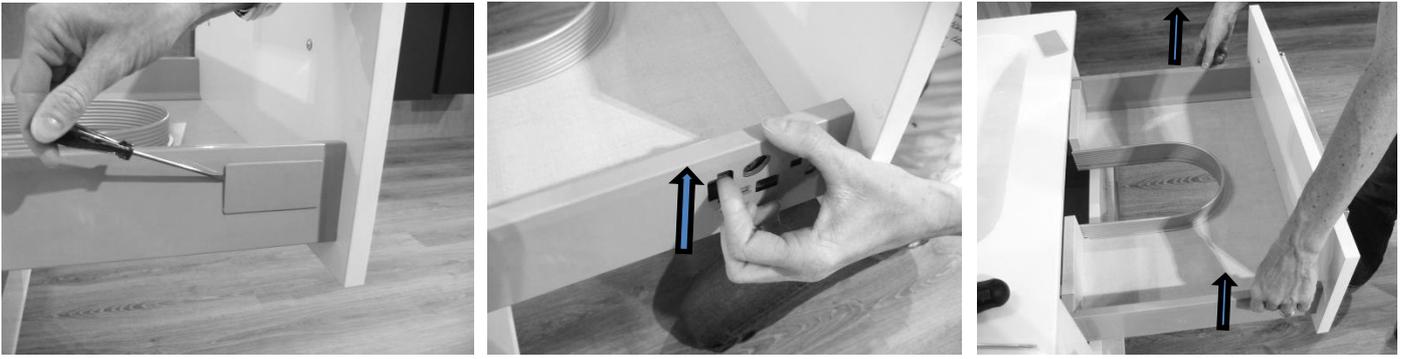

1) Remove the plastic cap with a screwdriver and push the level-hook upward.




2) Pull out the drawer by pulling it towards yourself and upward, keeping pushed down the 2 levels-hook, hereinafter push the guides towards inside the cabinet, so you avoid to crash against them during assembly. Repeat the arrangement with the inferior drawer too.

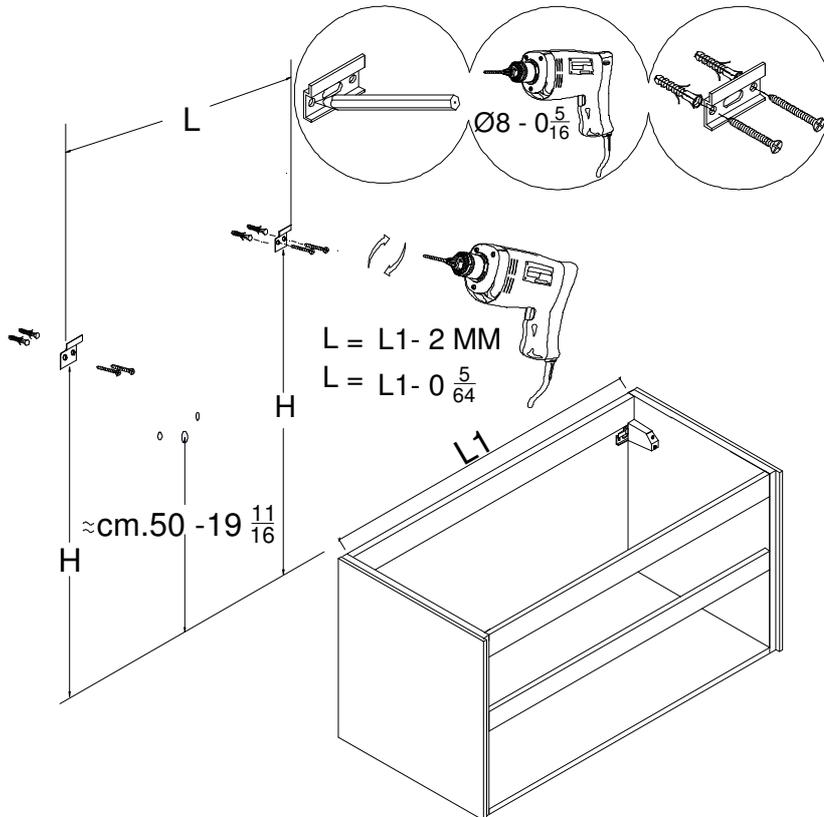


L= external distance of supports L1= inside distance of sides (- mm.2 -05/64) H= approx. cm.71 – 2761/64


3) At the wall, mark the points, where you will drill the holes for the Vanity wall-fixing. Then drill the holes, insert the dowels inside the wall holes, screw the supporting plates to the wall, using the supplied screws.

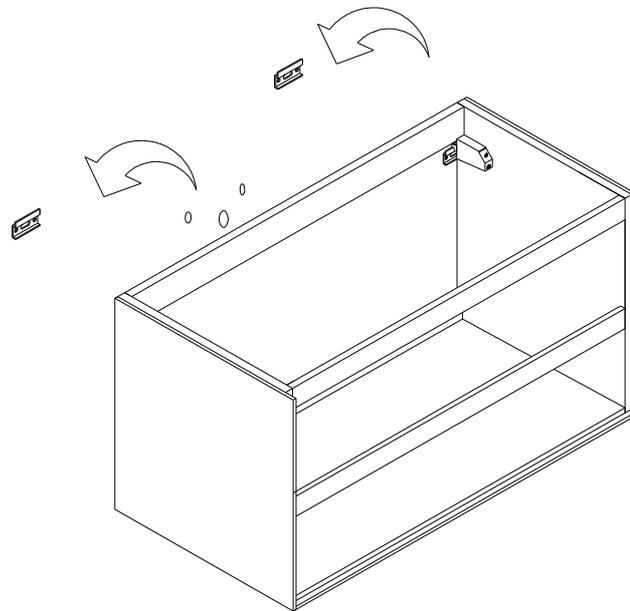


4) Hang the Vanity unit to the wall, by means of suitable wall brackets, which are already fixed at each side of the unit.

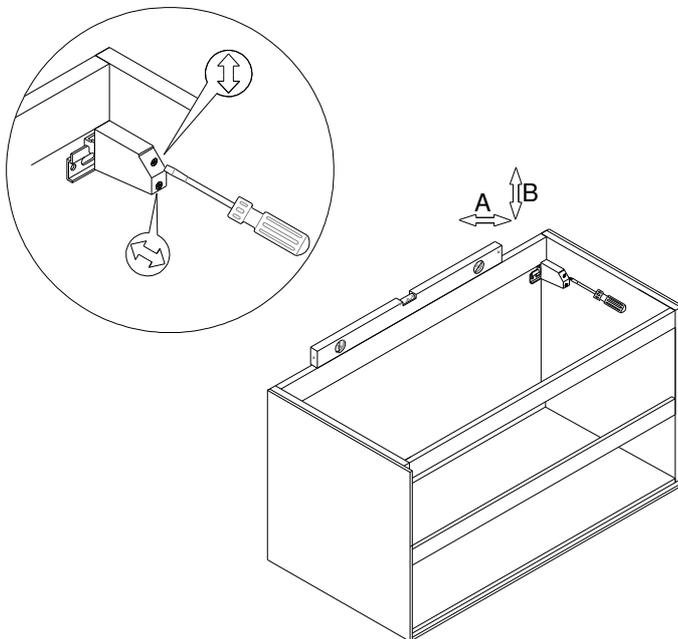


5) Adjust the height of the Vanity unit, turning the screw (B) of both supports till furniture is at right horizontal level. Hang the furniture, hooking the brackets onto wall-mounting plates and turn the screws (A) belonging to the furniture brackets.

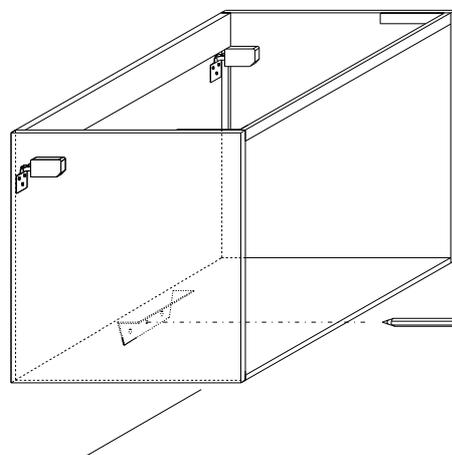


6) At the wall, please mark the points, where you will drill the holes, in order to fix the supporting "L" bar, holding the furniture.

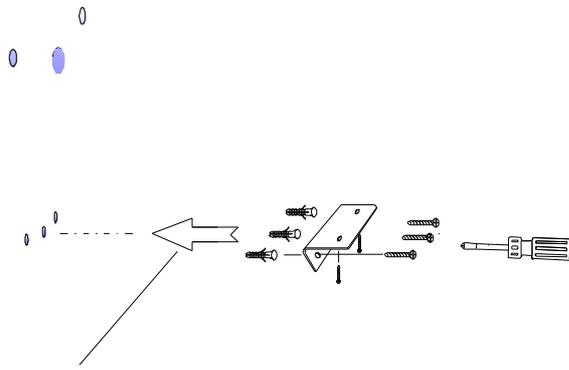


- 7) For convenience you may unhook the Vanity unit from the wall, after marking the holes positions. Make the holes with the drilling machine, where previously indicated with the pencil, insert the appropriate supplied dowels in the wall-holes and adjust the supporting brackets, turning the screws.

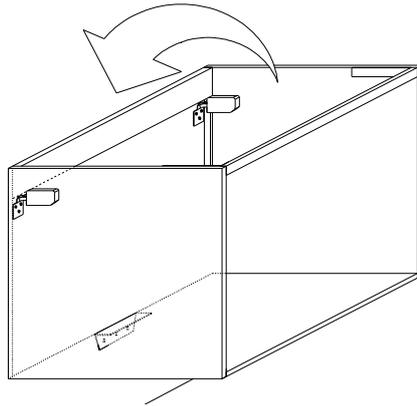

- 8) Replace the Vanity unit to its original position.


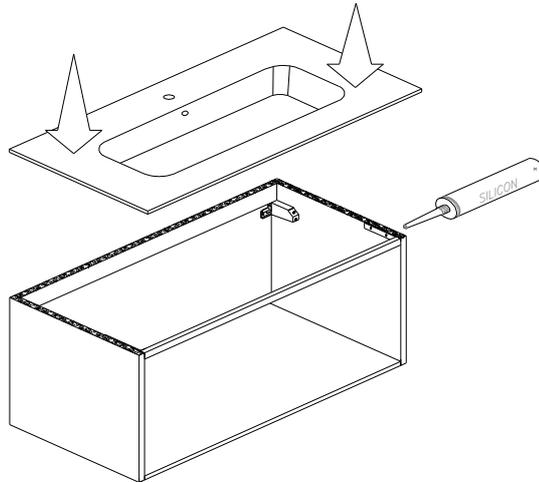


- 9) Silicone the upper edges of the furniture, then lay down the top exactly corresponding the center of the Vanity unit.

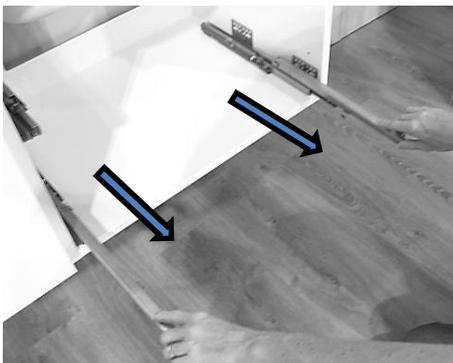



- 10) Before you install the drawers, pull out the side guides and lay the drawer on them. Close it, until the drawer is approached to the sides. At this moment you will hear a click, which means the right automatic lock of the drawer to the guides.

Unhook and adjust the drawer

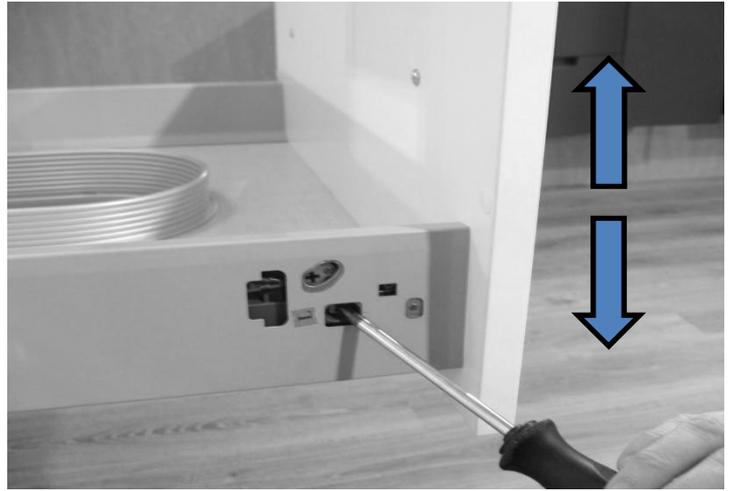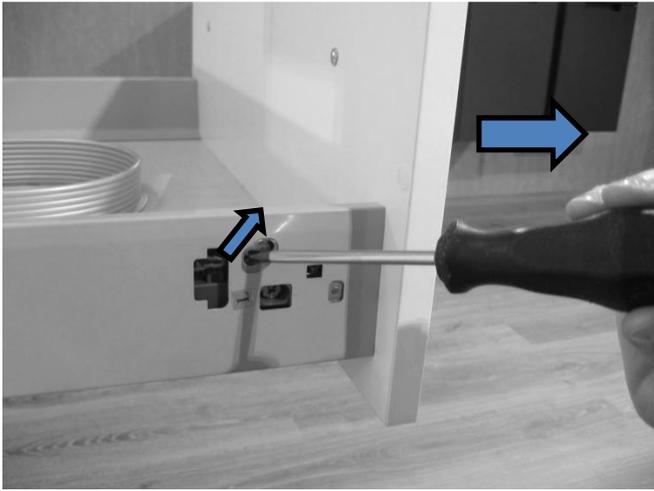


11) to unhook the front, turn the indicated screw.

12) to adjust the front height, turn the indicated screw.

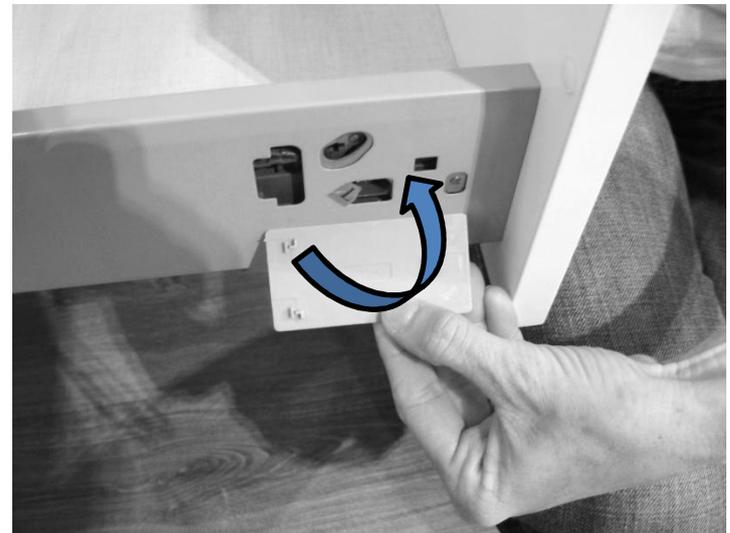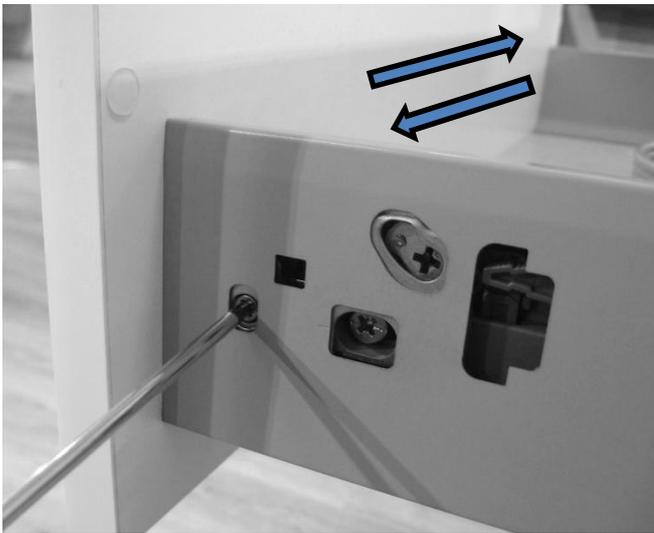

13) to adjust horizontally the drawer-front, turn the screw as indicated.

14) When you end all the adjustments arrangements, re-install the plastic cover as in picture indicated.

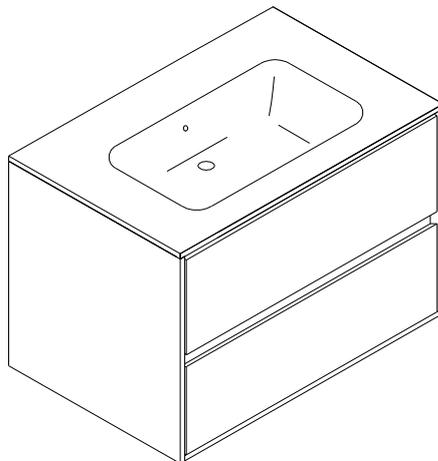

Thank You to have chosen our bathroom furniture!