

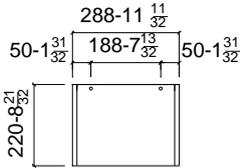


# INSTRUCTION FOR WALL-FIXING REF. "GAYA" COLLECTION




## Column-cabinet; half column

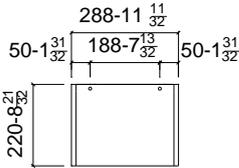



ART.C119

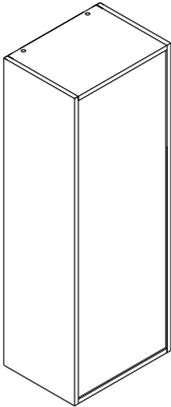



ART.C120

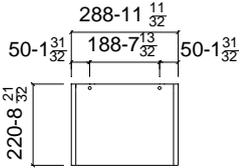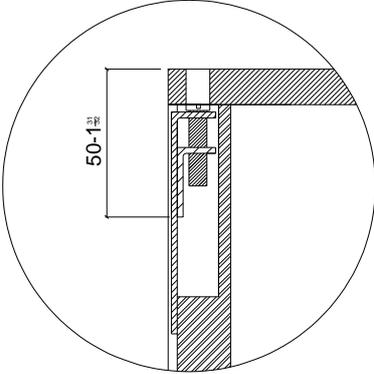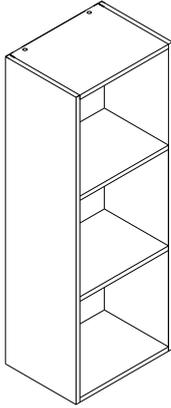


ART.C121

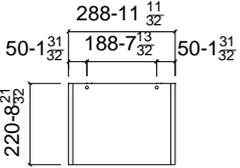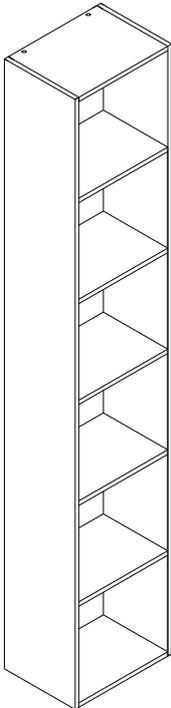

ART.C122

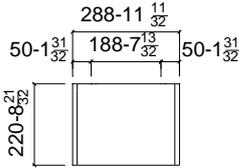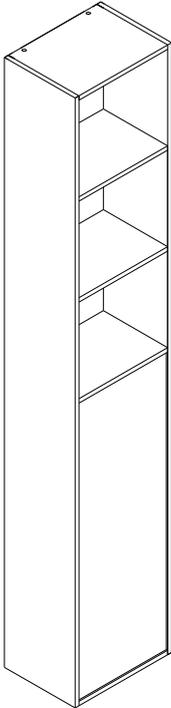

ART.C123


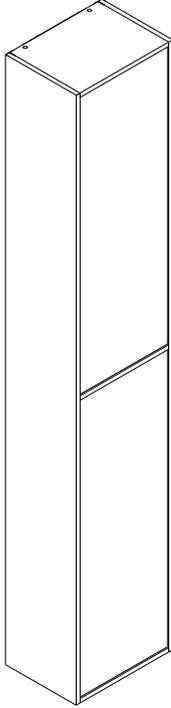


SUGGESTION FOR HOLES DISTANCES






1. For the wall-fixing of column-cabinet, half column-cabinet, mirror-cabinet and mirror with shelf, drill a hole with a twist-drill of diam. mm.8-05/16 following the previous signs, drawn with a pen, insert the dowels inside the holes, then screw with the supplied key-hook.

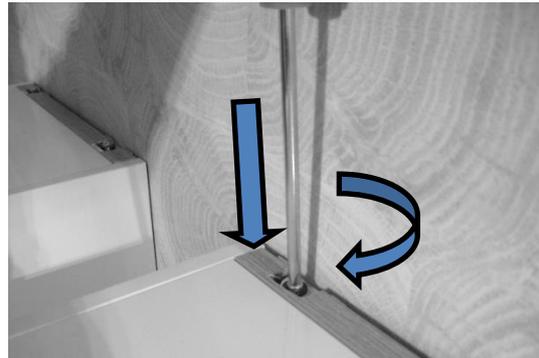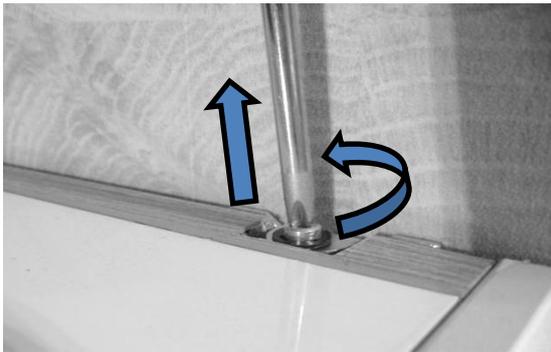


For the height adjustment of column-cabinet, half column-cabinet, mirror with shelf, mirror-cabinets, screw clockwise or screw anti-clockwise as pictures.


**Fixing system instructions in order to hang the column-cabinet at the wall**

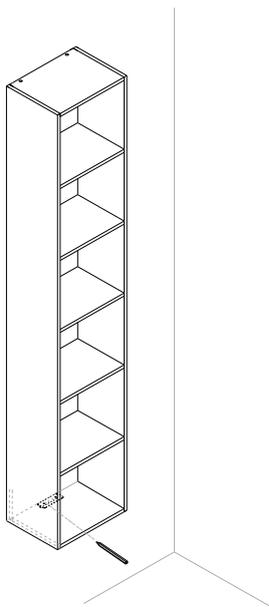

Draw at the wall the points, where you will drill the holes for the supporting bracket.

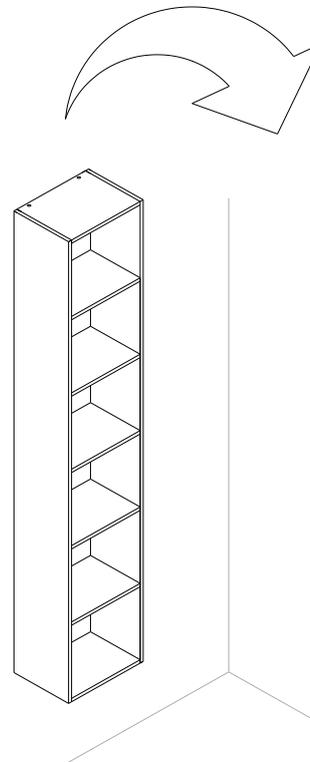

For your convenience it is recommended to unhook the cabinet from the wall, after marking the position of the holes.

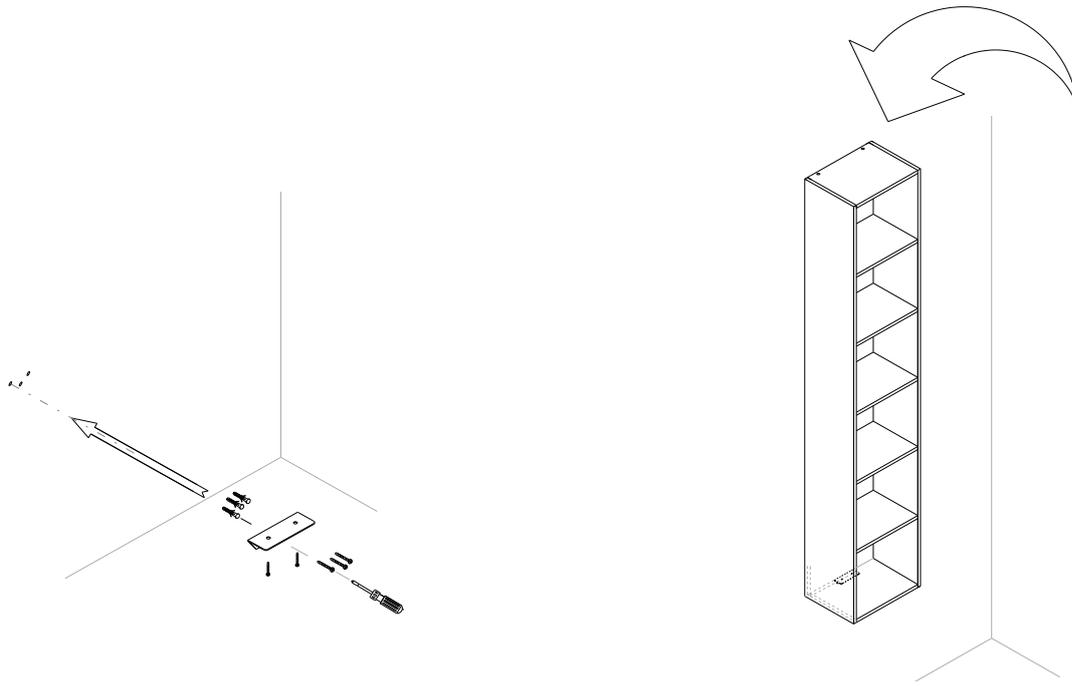

**Drill the holes with a drilling machine, where you marked the points. Insert the equipped dowels and fix the supporting bracket, screwing the equipped screws.**

**Re-set the column-cabinet as the before position**



**In case there are doors, covering the storage-shelves, for the door adjustment, please follow the above instructions.**