



INSTRUCTION FOR WALL-FIXING REF. "GAYA" COLLECTION


Column-cabinet, half column-cabinet, Mirror-cabinet and Mirror with shelf

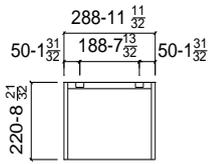


ART.C121

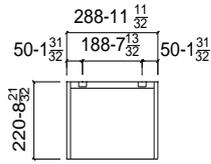


ART.C122

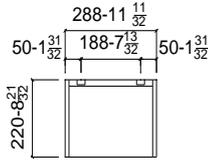








ART.C123

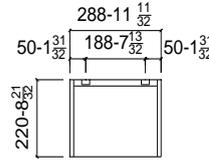


ART.C119

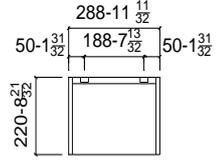


ART.C120

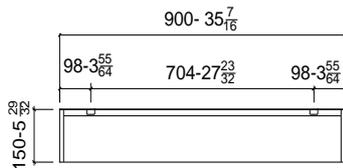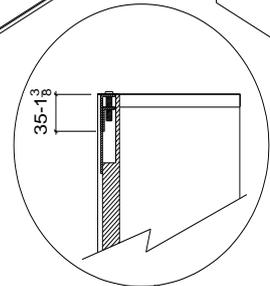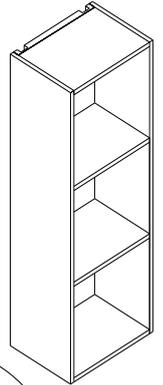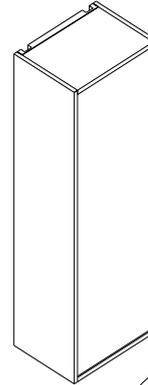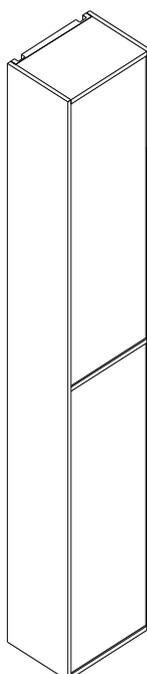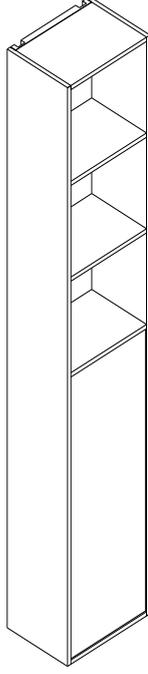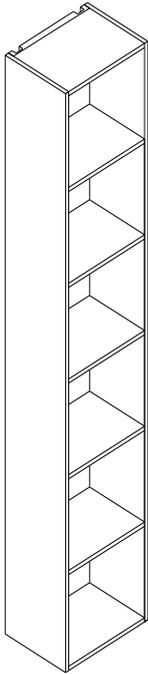




ART.S634

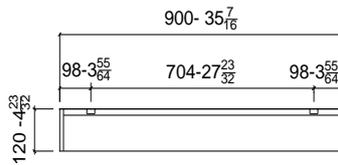


ART.S622

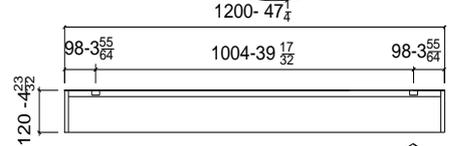



ART.S623

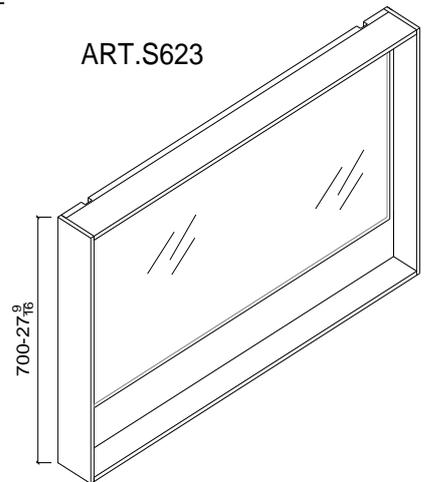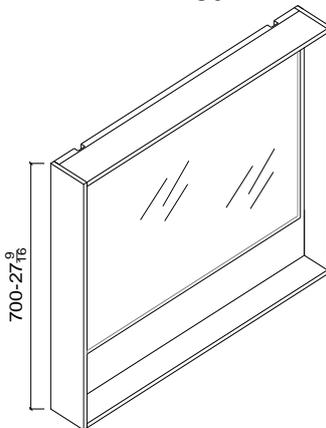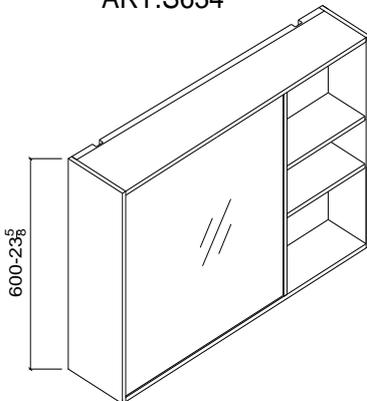



SUGGESTION FOR HOLES DISTANCES

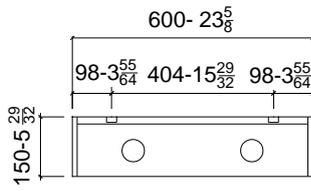



ART.S616

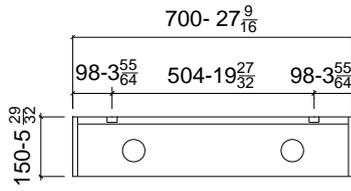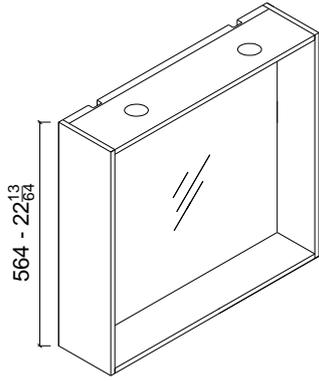



ART.S618

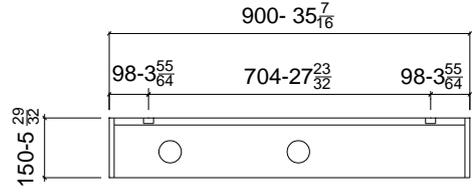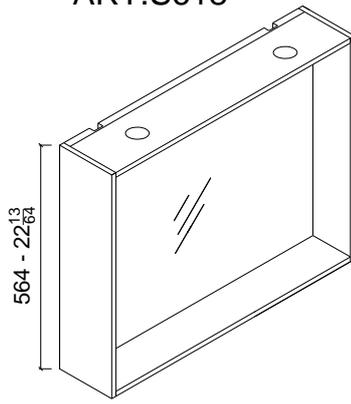


ART.S624 - S626

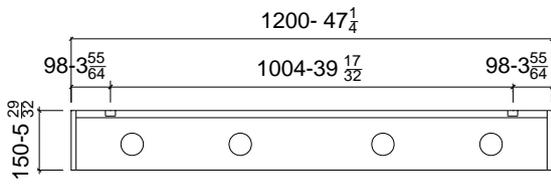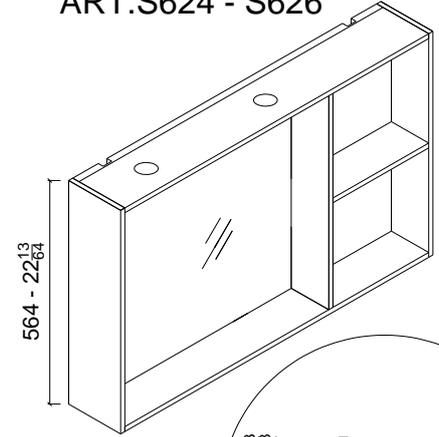

ART.S628 - S629

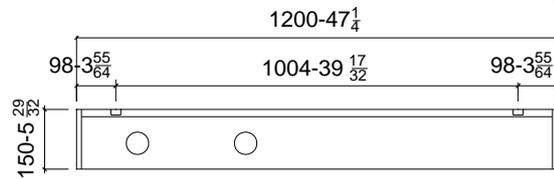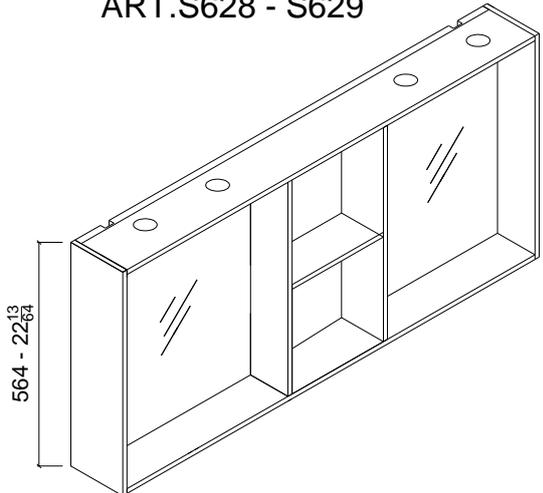

ART.S633 - S627

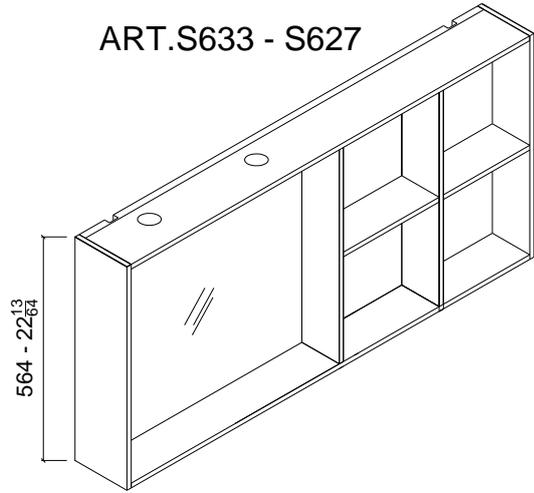

SUGGESTION FOR HOLES DISTANCES

Before You start:

- Please unpacking and check-up the product, if it is complete and not being damaged.
- Supplied supporting brackets/fixings system and screws are only for solid, full wall. Take care that you are using, by yourself, the right screws for wall type – in case of doubts, please consult professional staff.
- Clean the room and the surface, the area must be dry and without dust or powder.
- Please read completely these instructions.
- Take care that you have got all necessary and correct work tools, please see the following list of “necessary tools”.




Safety:

- Handle with care the cardboard boxes and packaging, avoiding risks to damage furniture.
- Bathroom furniture is heavy and needs 2 people to support/transport and install it.
- During wall drilling, first check-up that there are no hidden pipes or cables inside the wall.
- Use safety-glasses during drilling arrangements.
- Before electrical connection, disconnect the main voltage power supply.


Disclaimer/ Exclusion of liability


- Please notify Your dealer immediately, if there is any damage or defects. The manufacturer cannot be held responsible for any installation costs, which can result from damaged or defective product during installation.
- Always dispose the packaging materials respecting the environment.

Necessary tools (not supplied)

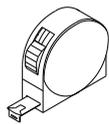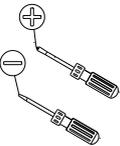
RULE 	SPIRIT LEVEL 	SPIRENIVEL 
TWIST DRILL  Ø8-0 5/16	ELECTRIC HAND-DRILL 	SCREWDRIVER 

Suggested height and distances for the assembly of “Gaya” elements


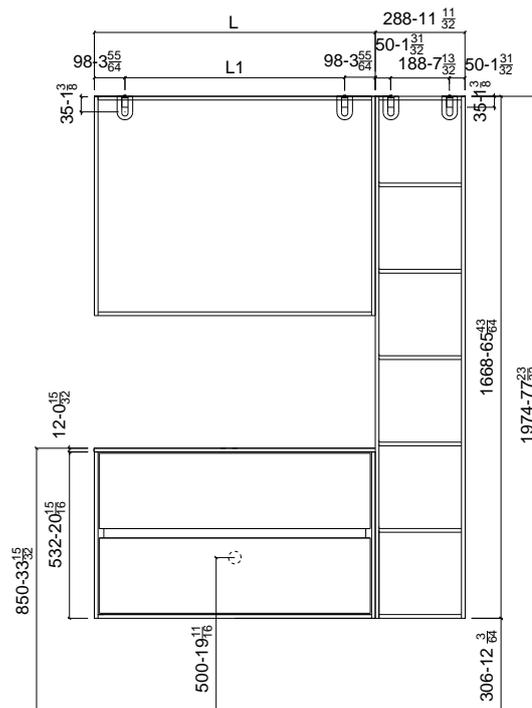


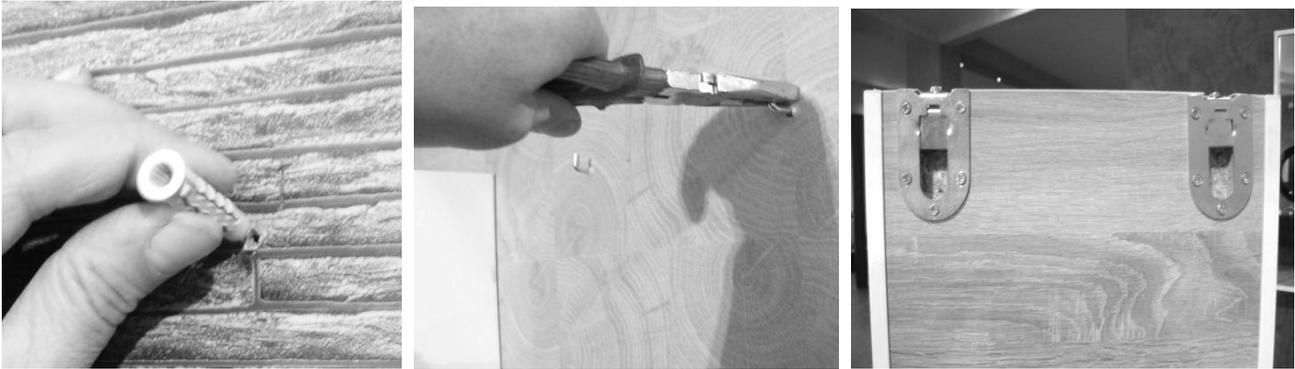

1. For the wall-fixing of column-cabinet, half column-cabinet, mirror-cabinet and mirror with shelf, drill a hole with a twist-drill of diam. mm.8-05/16 following the previous signs, drawn with a pen, insert the dowels inside the holes, then screw with the supplied key-hook.

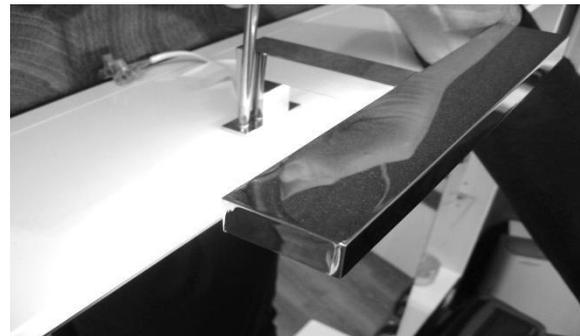

2. In case of installation of mirror with shelf or mirror-cabinet, before to hang the element at the wall, connect the electrical installation. Pay attention: before any electrical arrangement, disconnect the main voltage power supply, later connect the cables of the Driver to the main electrical power 220-230V according to electrical polarity.

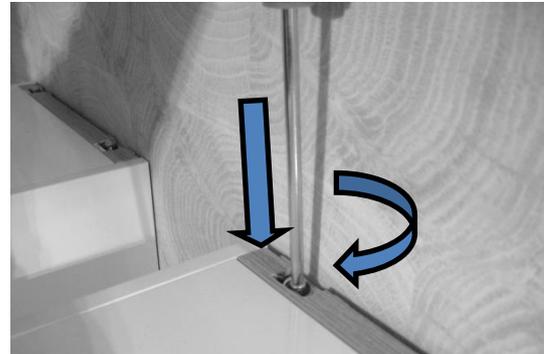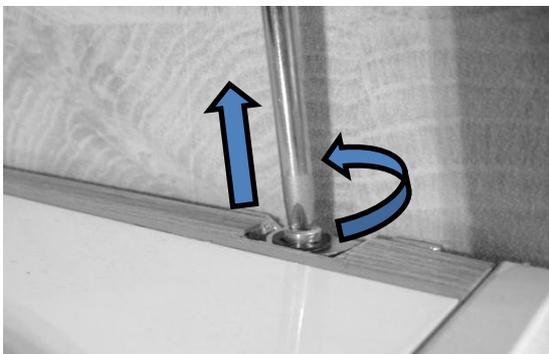

3. For the height adjustment of column-cabinet, half column-cabinet, mirror with shelf, mirror-cabinets, screw clockwise or screw anti-clockwise as pictures.



In case there are doors, covering the storage-shelves, for the adjustment, please follow the above instructions. Page 4